


SERIES 1300 Oxygen Deficiency Monitor

Example Installation Configuration ¹

For a System with One Local Oxygen Sensor and Two Remote Oxygen Sensors With Four Optional Horn and Strobes

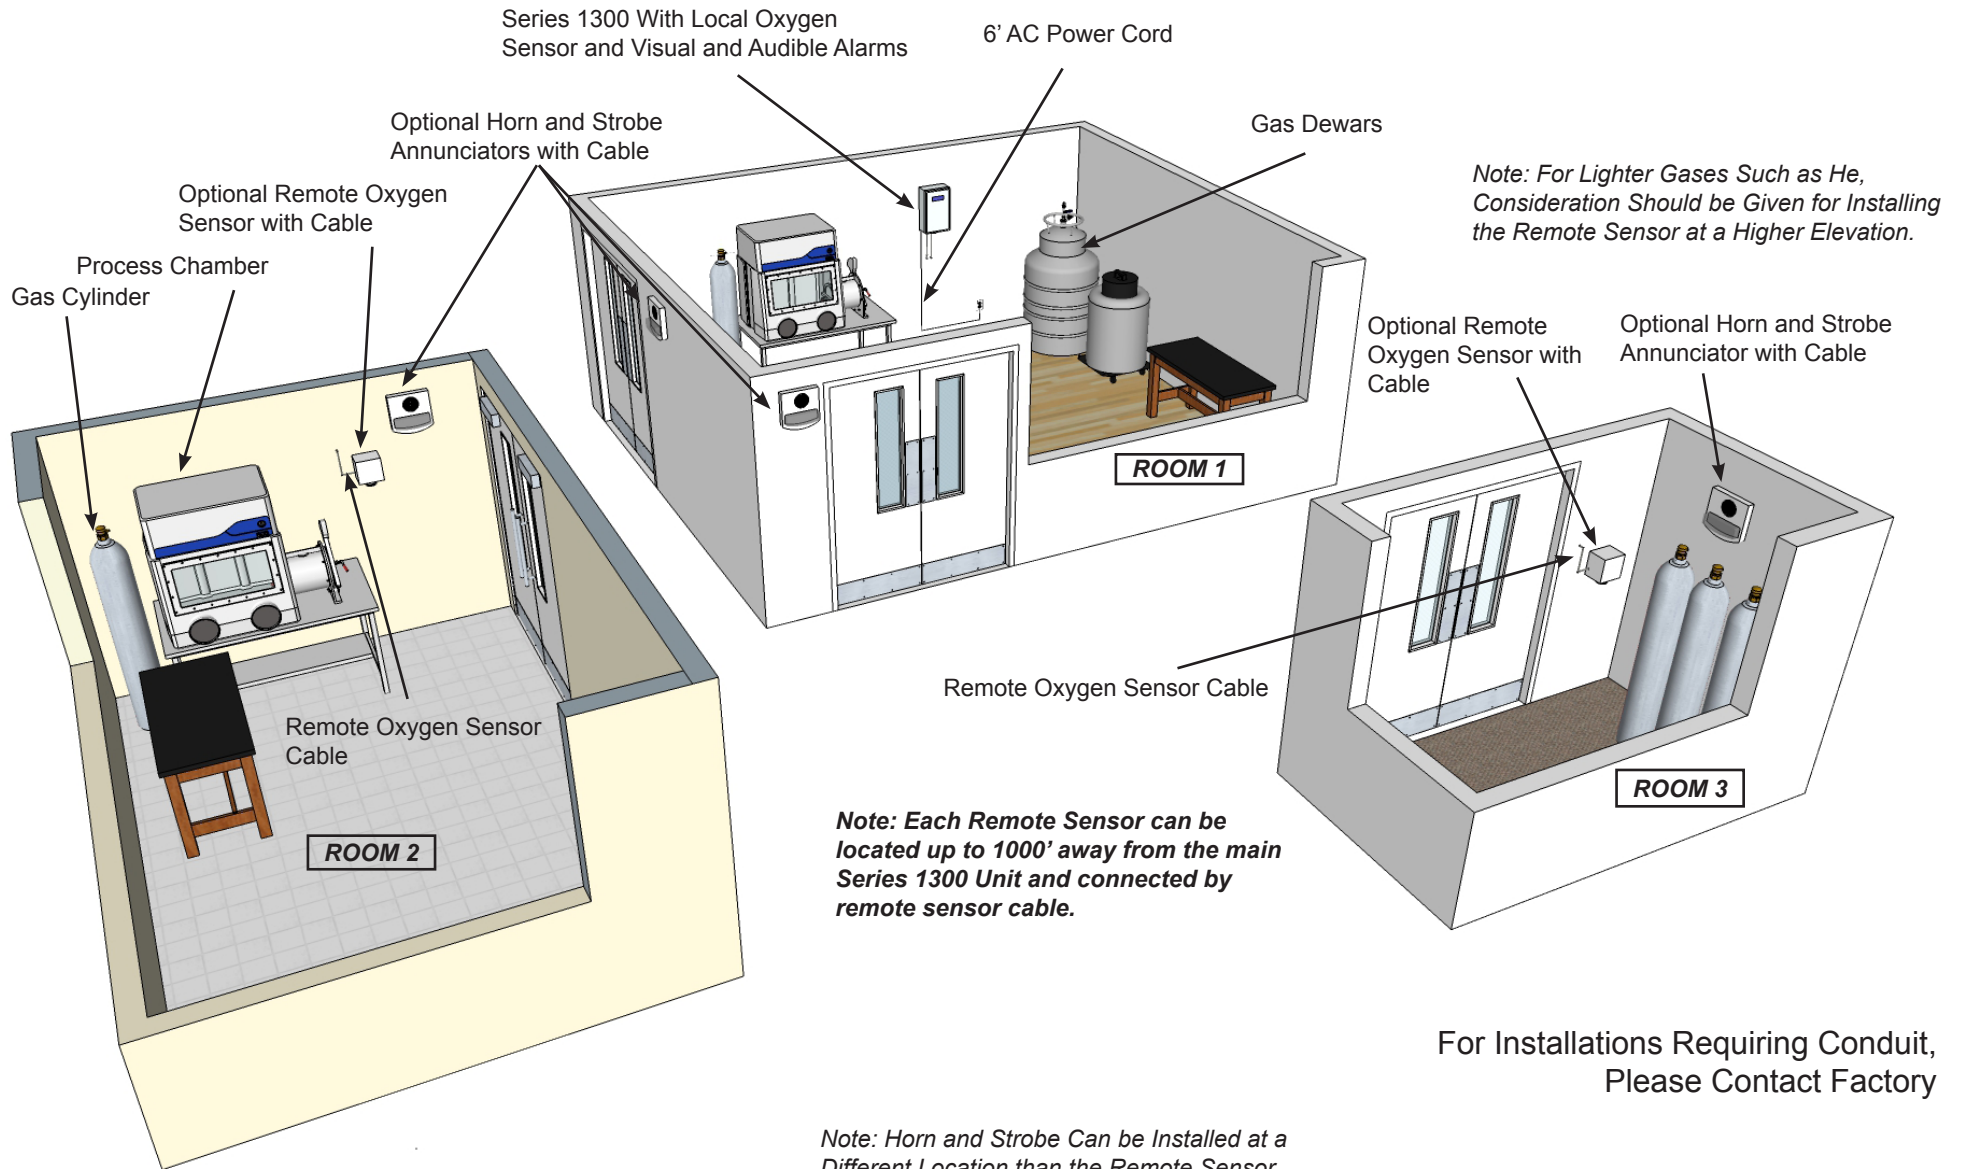

¹ Disclaimer: The above installation is for example purposes only. It does not represent a specific recommendation by Alpha Omega Instruments. The exact placement of the monitor(s) and sensor(s), as well as the number required, is to be determined by the end user based on the physical layout of the proposed installation.